

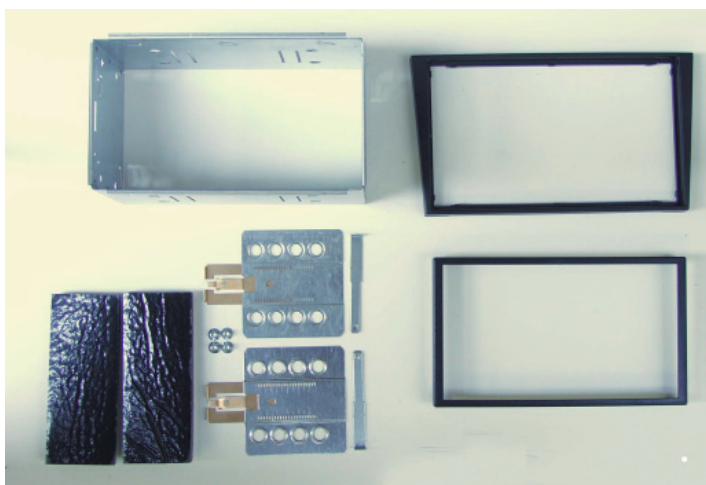
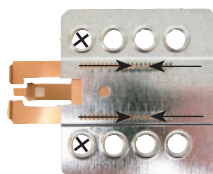


Installation manual for: **Opel various models**

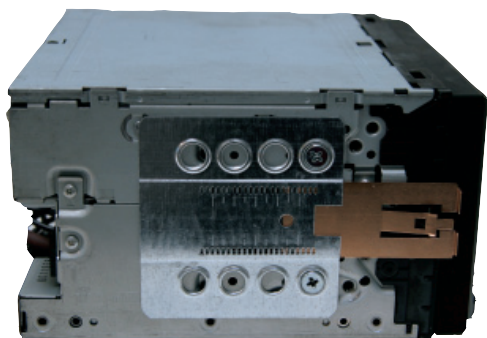

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1X Replacement frame
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 4X Screws
- * 2X Cushion

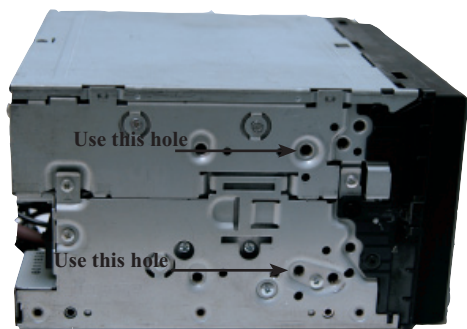

Kenwood DDX6029/ DDX7025

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow
Measured from left to right.

* Mount the plates.


KENWOOD

Listen to the Future

2-DIN

CAW1232-01/
CAW1232-18

1

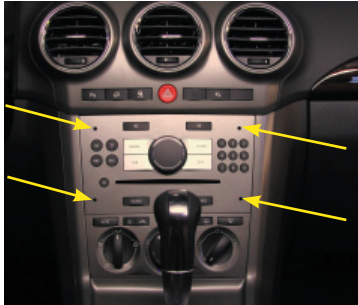

Remove the original radio unit using Philips radio keys at the location of the arrows.

2



Remove the original radio bracket. This is tighten by a screw at the location of the arrow. (The screw might be at a other location in other models)

3



Place the replacement panel and the 2-Din met bracket.

4



Place the head unit and radio trim.

Opel Agila 2004 -->
Opel Agila/ Corsa /Astra--> 2004
Opel Antara 2007 -->
Opel Astra 2004 -->
Opel Astra 2004 -->
Opel Astra 2004 -->
Opel Astra 2006 -->
Opel Corsa 2006 -->
Opel Corsa 2006 -->
Opel Corsa 2006 -->
Opel Corsa C/Corsa C Combi 2003 -->
Opel Meriva/ Tigra 2003 -->
Opel Vectra C+CW/ Signum 2005 -->
Opel Vectra C+CW/ Signum 2005 -->
Opel Vectra C+CW/ Signum 2005 -->
Opel Vectra/ Signum 2003 --> 2005
Opel Vivaro/ Vectra --> 2003
Opel Zafira 2005 -->
Opel Zafira 2005 -->
Opel Zafira 2005 -->

Black CAW1232-13
Black CAW1232-01
Black CAW1232-18
Antracite CAW1232-05
Black CAW1232-06
Silver CAW1232-04
Beige CAW1232-17
Beige CAW1232-14
Silver CAW1232-15
Black CAW1232-16
Silver CAW1232-03
Silver CAW1232-03
Silver CAW1232-07
Antracite CAW1232-08
Black CAW1232-09
Antracite CAW1232-02
Black CAW1232-01
Silver CAW1232-10
Antracite CAW1232-11
Black CAW1232-12

Connect all of the needed wiring harnesses and check the connections carefully.